



HiveLD-S 1.8V LED Driver (McGizmo E-Series 1x123)

User Manual

1. Introduction

The HiveLD ("Highly Versatile Led Driver") is a constant current regulated led driver with a configurable user interface. Using the built-in setup mode, the drivers functionality can be configured in various ways.

The configuration parameters include the number of brightness levels, whose output currents can be configured independently of each other if desired. There is a choice of using different brightness level memory modes.

The settings can be stored in up to 3 preset slots to quickly recall different configurations for specific applications without having to change a number of individual settings every time.

Additionally the driver monitors battery voltage and board temperature. This way it can keep the light operating safely and prevent a sudden shut down when the battery is depleted.

2. Driver operation

This section describes the operation of the driver with the default configuration without activating the setup mode.

Basic operation

Level Switching: "Toggle OFF"

To switch the output levels you have to switch the light OFF for a short time of less than 0.5 seconds (called "Toggle Short") (see setting 15 "Switching mode"). If the OFF time is longer than 0.5 seconds no level change occurs. In this mode the ON time of the driver is not relevant for level switching.

Memory mode: "Persistent"

The driver memorizes the last output level (see setting 3 "Operating mode"). Level switching ("Toggle Short") advances to the next output level, from the last (highest) level the driver returns to the first (lowest) level.

Advanced features

Overtemperature protection (Signal: Quick single blink)

The driver steps the output down by one of the internal 21 brightness levels (as described for Settings 6 to 10) when the overtemperature value (default: 70°C) is reached. If the temperature consequently drops below this threshold value again by a certain margin, the programmed brightness level is restored. This is particularly useful if the light heats up temporarily because i. e. it has been laid down on a surface with a poor thermal conductivity. The visual indication for the temperature output reduction is one quick blink of the LED after the reduction.

Note: The temperature is measured on the driver itself, so it is not the actual temperature of the outside of the light or the LED. In the case of the E-Series lights, the driver temperature is higher than the lights' outside.

Low voltage output reduction (Signal: Quick double blink)

In order to maximize the remaining runtime as the battery depletes, the driver steps down the brightness level automatically. The default voltage threshold for this output reduction is for primary lithium cells with 3.0 V nominal voltage. When reaching the threshold voltage of 2.5 V, the reduction algorithm steps down through the configured output levels. If the lowest output level is reached, and the battery voltage nears the end of discharge voltage of 2.0 V, the LED is blinking slowly.

The battery's state of charge is determined when the driver is being powered on, thus the LED will come on with a lower output level if a low voltage condition is met. When using protected Li-Ion batteries, this prevents the protection circuit of the battery to cut off the cell immediately if the cell is nearly completely discharged.

An output reduction due to low battery is indicated by a quick double blink of the LED just after reducing the output.

3. Configuration of the driver (Setup mode)

Before the setup mode can be used, it needs to be **unlocked** by closing the **jumper on the contact board**. This can be done by applying solder to the jumper, with electrically conductive (silver filled) ink or by filling the gap with graphite using a pencil.

If the jumper is opened again at some point later, the configuration will be frozen in the state it is at that point.



Solder jumper, connect
two sides to unlock
setup mode

Once unlocked on the hardware, to actually enter setup mode you have to execute a certain sequence of "long" and "short" toggles:

2x toggle long - 4x toggle short - 2x toggle long

Toggle short: toggle the power quickly in less than 0.5 seconds (the same as for switching levels)

Toggle long: toggle the power for 0.5 to 2 seconds

Note: Depending on the level switching mode (see setting 14), a TOGGLE is either defined by the driver being TURNED OFF (Toggle OFF mode, default) or by being TURNED ON (Toggle ON mode) for the certain length of time.

After completing above sequence, the driver will start up in setup mode. The driver uses the main LED to signal the setting numbers and their values in a fixed scheme that is visualized in Fig. 1. An example of the actual pattern of flashes is given in Fig. 2.

The **signaling pattern** starts with a quick triple flash of the LED. After a short delay, a series of slower blinks indicates the currently active **setting number**. After another delay follows a series of slightly faster blinks signalling the **value of the current setting**. The signal block is concluded with another triple flash.

Note: In case of a number being a double digit value, the second digit (tens) is signaled as quick double flashes, preceding the blinks with the regular speed for the remaining single digit number. For example the value "12"

would be represented by a double flash and two blinks, a "20" would be two double flashes and no regular blinks.

The **user input** happens by "turning off" the driver during certain time frames within the signaling sequence. These intervals are depicted on the right side of Fig. 1. and also in Fig. 2:

Period 1 - Go to next setting: If the power is turned off between the first and the second triple flash, i. e. while signaling the setting number and value, the driver will advance to the next setting of the setup when it is turned on again. No changes to the settings' value are made.

Period 2 - Change setting value: Turning off the power after the second triple flash alters the current settings' value. The exact sequence depends on whether the setting has just two possible states or more: If the current setting is a **two-stage setting** (Yes - No), there is a 1.5 second long input window (during which the LED is driven at a medium brightness). The end of the input window is visualized by the LED being turned off.

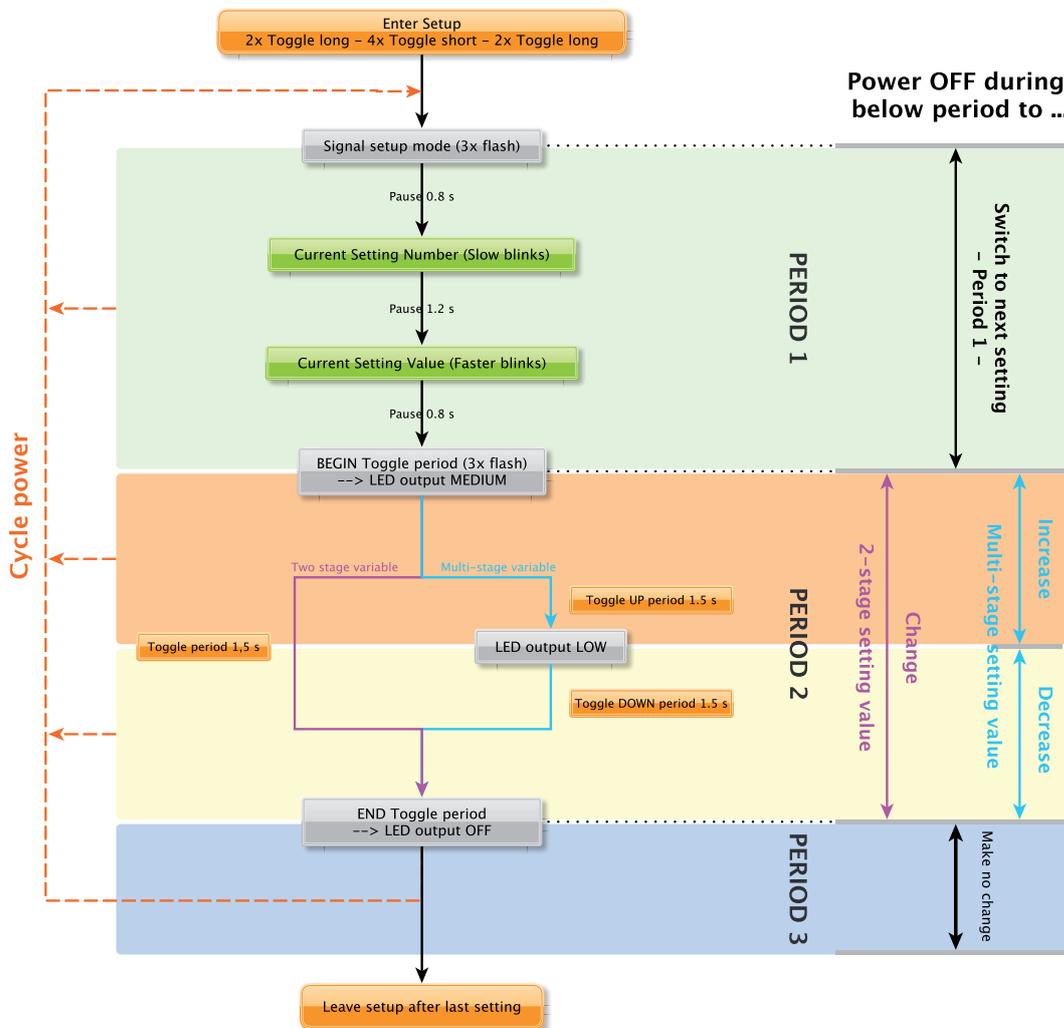


Fig. 1: Setup signal pattern displaying current setting and its value, followed by the input window for changing the settings' value

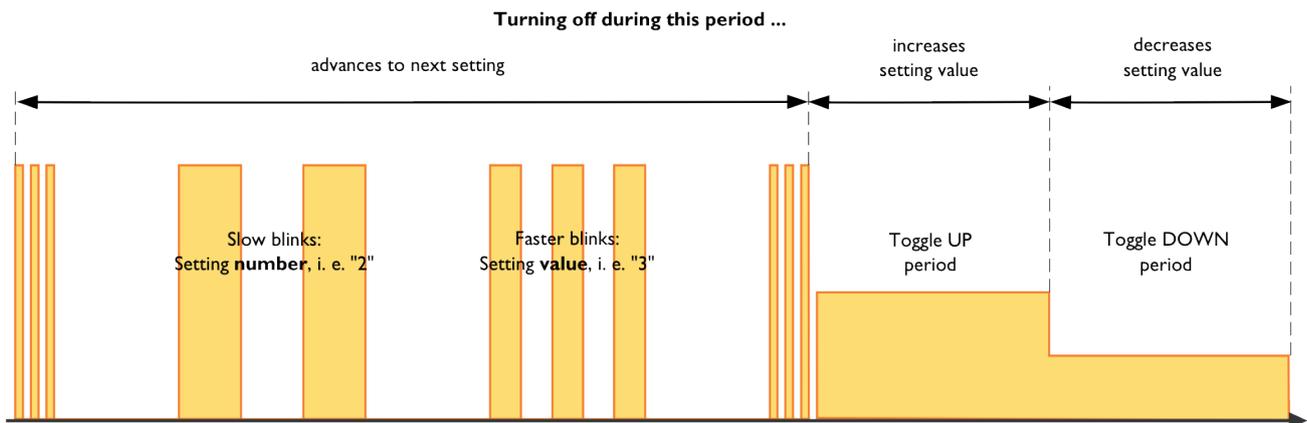


Fig. 2: Example of a setup signal pattern (main LED) for a multi-stage setting, showing setup setting 2 with a set value of 3; the height of the yellow areas depicts the brightness of the signal

In case of a **multi-stage setting**, the input window is split into a 1.5 second period for increasing the value, followed by a similarly long period for decreasing the value. As a visual indication for these periods, the LED output is reduced when the "decrease value" period starts. The LED is turned off when the entire input window is over (see also Fig. 3 for an illustration of this sequence).

After a change to the value has been made, the driver will then start up with same setting and signal the changed value.

Period 3 - Do nothing: If the driver has not been turned off until after the end of the entire sequence (i. e. when the main LED is turned off), it will return to the same setting without any changes.

Once all settings have been cycled through, the driver will exit setup mode and return to normal operation. Practically this means that the setup mode can be easily left by toggling the power quickly several times.

4. Setup usage examples

The following walkthroughs are meant to give a step-by-step description for making changes to the configuration and assume a factory configuration. Of course the hardware jumper on the board has to be closed.

Scenario 1: Changing the number of brightness levels from 4 to 3

First you will need to execute the setup toggle pattern (2x toggle long - 4x toggle short - 2x toggle long) to enter setup mode. You will see the flashes of the driver signaling the first setting after you successfully entered this pattern. If you are not successful just try again and make sure that you wait the 0.5 to 2 seconds of OFF time for the toggle long inputs.


We will now want to move to setting 3 for changing the number of brightness levels. To do so you have to turn off the light during "period 1" of the signaling sequence (see Fig. 1), i. e. before the second quick triple flash. After doing this two times we have now reached setting 3.

To familiarize with the structure of the signaling pattern just watch it entirely a few times. As described above, following the first triple flashes, the number of the setting is signalled as 3 slower flashes. After a brief pause you will see 4 slightly faster flashes, indicating the 4 output levels that are currently programmed. The second triple flash then indicates the start of the input window for changing the setting.

Since it is a setting that can have a value from 1 to 5 (a multi-stage setting), there will be a 1.5 second time frame (toggle UP period), during which you increase the setting value if you turn off the light. The LED is lit on a medium brightness level during this "toggle UP" period.



Settings for HiveLD-S 1.8V

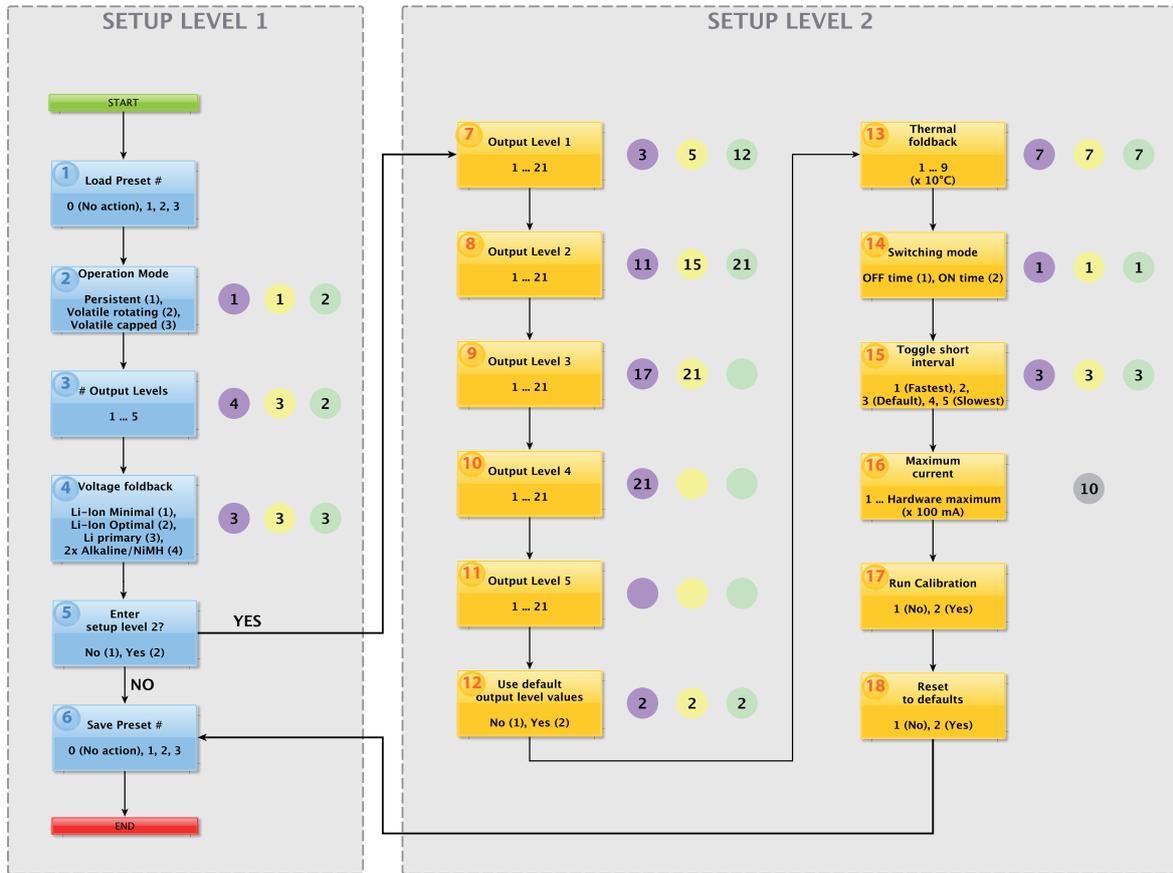

Legend:



- Factory default values (Stored in Preset 1)
- Default values in Preset 2
- Default values in Preset 3
- Preset independent setting

Fig. 3: Settings are divided into two levels, circled numbers beneath settings denote default values

The following “toggle DOWN” period is indicated by the LED output being reduced. Turn the light off now to decrease the setting value to 3. When you turn it back on you will see the signaling sequence for setting 3 again, but this time showing a value of 3.

Since this was the only change to make, we can now leave the setup by skipping over the remaining settings. Just toggle the light off and on quickly 4 times to do so. Be sure you don’t inadvertently change another setting as you turn off the light *before the second triple flash* in the signaling pattern.

Scenario 2: Modifying the brightness value of output level 1

If you would want to decrease the first (lowest) brightness level of the 4 default levels you will have to change setting 7. This is a setting in the level 2 of the setting structure.

After entering the setup mode (setup toggle pattern), we first have to go to setting 5 which lets us enter the level 2 settings. So skip through settings 1 to 4 by turning the light off during period 1 of the signaling pattern. Now being in setting 5 the driver will signal 5 slower blinks (setting number) and one faster blink (indicating that setting 5 is currently set to “No”). By turning off the light after the second triple blink, we change this setting to “Yes”, which would be signaled as two blinks for the setting value if you watch the entire signal pattern after making the change.

Now you have to move to the next setting (which is setting 7 we want to change) by turning off the light

during period 1 of the signaling pattern. Once in setting 7 we decrease the value the desired amount of times by turning the light off during the “toggle DOWN” input window. After having changed the setting value we can leave the setup by skipping over all remaining settings.

5. Detailed explanation of the settings

The settings are divided into **two groups (called levels below)**, the first group containing the more common settings that are likely to be used more often. To access the second group one has to change setting 5 (Enter Setup Level 2) to “Yes” and then advance to the level 2 settings. Note that this means you will move from setting 5 to setting 7 as shown in Fig. 3.

Level 1 settings:

Setting 1: **Load preset**

This setting is used to load the values of a saved preset that contains all relevant settings for the driver operation. Included in the presets are settings number 2 and 3, as well as 6 to 15. As detailed in Fig. 3, there are predefined preset values already stored in the preset slots.

The default value for this setting is 0 (no blinks signaled), meaning no preset will be loaded. By changing this settings' value to 1, 2, or 3, the corresponding preset data will be loaded as soon as the driver advances to setting 2. This means one could still make changes to the just loaded setting values before leaving setup mode.

Setting 2: **Operation mode**

This setting defines whether the last active brightness level is being memorized (“persistent”) or not (“volatile”). There is two volatile modes, “volatile rotating” will advance through the brightness levels indefinitely whereas “volatile capped” does not roll over from the highest back to the first brightness level. In volatile mode, the driver will always start up with the first brightness level (which by default is the lowest) if there has been no “toggle short” event beforehand.

Setting 3: **Number of Output levels**

The number of output levels can be set to a value from 1 through 5.

Setting 4: **Voltage foldback (a.k.a. Battery chemistry selection)**

The low voltage output reduction works with predefined voltage thresholds based on battery types. In case of the *HiveLD-S 1.8V* (V_{in} 1.8 V to 4.5 V), the available options are 1x Li-Ion rechargeable (using either a minimal voltage threshold or an “optimal” threshold that increases remaining runtime after the first reduction step), 1x primary Lithium (CR123) and 2x NiMH /Alkaline. See the table below for the actual voltage levels at which the first and last reduction steps occur.

Setting / Cell type	Voltage threshold first reduction step	Voltage of last reduction step
1: Li-Ion minimal	3.0 V	2.5 V
2: Li-Ion optimal	3.3 V	2.8 V
3: Lithium primary	2.5 V	2.0 V
4: 2x NiMH/Alkaline	2.1 V	1.9 V

Setting 5: **Enter setup level 2**

This settings' value has to be set to “Yes” in order to access the “Level 2 settings” (settings 7 through 18).

If it is left unchanged the driver will move on to setting 6.

Setting 6: Save preset

This setting allows to save the currently active configuration to one of the three preset slots. See explanation of setting 1 for details.


Level 2 settings:

Settings 7 to 11: Set Output levels 1 to 5

The brightness of the output levels in the currently active configuration can be changed directly through these settings. Each level can be set individually to a brightness level value from 1 to 21 (lowest to highest possible output level), i. e. it would even be possible to configure the driver to use a different output level sequence like i. e. "High - Low - Medium".

Note that the number of active output levels is determined by setting 3, so if for example the driver is set to use three levels then changing the value of output levels 4 and 5 would have no effect.

The graph below shows the relative output current of the 21 brightness levels relative to the maximum current. The output in amperes increases exponentially, but since the sensitivity of the eye scales logarithmically, the output increase in lumens would appear to be somewhat linear.

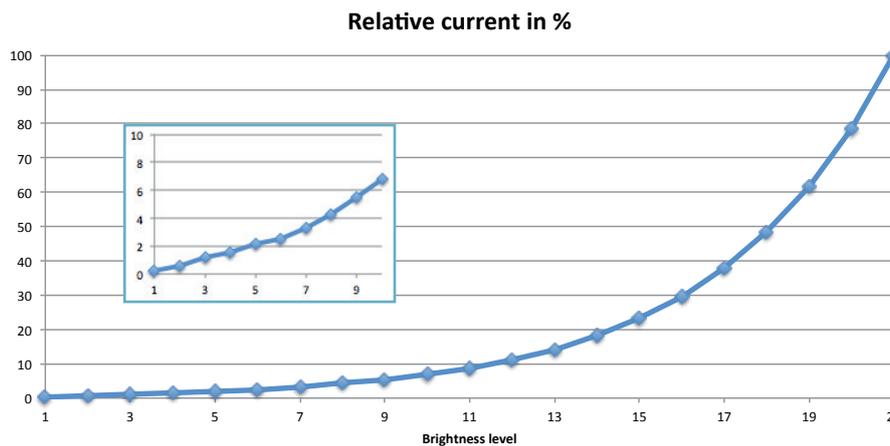

The absolute I_{out} values in milliamperes are given in the table below for a number of possible configured output currents. Note that the absolute minimum current of the drivers is somewhere between 2 and 5 mA, hence the values in red might not be true in reality but could actually be higher.

Brightness Level	Relative current in %	Brightness level output current based on configured maximum output current in mA					
		200	400	600	800	1000	1200
1	0,59	1	2	4	5	6	7
2	0,78	2	3	5	6	8	9
3	1,17	2	5	7	9	12	14
4	1,76	4	7	11	14	18	21
5	2,54	5	10	15	20	25	31
6	3,52	7	14	21	28	35	42
7	4,70	9	19	28	38	47	56
8	6,07	12	24	36	49	61	73
9	7,63	15	31	46	61	76	92
10	9,39	19	38	56	75	94	113
11	11,35	23	45	68	91	114	136
12	13,50	27	54	81	108	135	162
13	16,44	33	66	99	132	164	197
14	20,16	40	81	121	161	202	242
15	24,85	50	99	149	199	249	298
16	31,70	63	127	190	254	317	380
17	39,14	78	157	235	313	391	470
18	48,34	97	193	290	387	483	580
19	61,64	123	247	370	493	616	740
20	78,47	157	314	471	628	785	942
21	100,00	200	400	600	800	1000	1200

Setting 12: Use default output level values

When set to “Yes“, then changing the number of output levels (setting 3) will replace the brightness level values in settings 7 to 11 with default output level values.

Number of output levels	Level 1 brightness value	Level 2 brightness value	Level 3 brightness value	Level 4 brightness value	Level 5 brightness value
1	21	-	-	-	-
2	12	21	-	-	-
3	5	15	21	-	-
4	3	11	17	21	-
5	2	8	14	18	21

Setting 13: Thermal foldback

The threshold value for the overtemperature output reduction is defined through this setting. When the temperature exceeds the threshold, the driver reduces the output to the next lower of the 21 brightness levels. The default value of 7 corresponds to a threshold temperature of 70°C. *Note that the temperature is measured on the driver board and doesn't directly correlate to the temperature of the light.*

Setting 14: Switching mode

Output level switching is done by a quick (less than approx. 0.5 s) switching action (called Toggle short). In “ON time mode“, the toggle short condition is defined by the time the driver is powered ON before switching off. In “OFF time mode“, the time between powering off the driver and powering it on again determines whether a level change takes place.

Setting 15: Toggle short interval

This allows to set the toggle short interval (default 0.5 seconds) to either a shorter or longer time. The selectable time values are approximately 0.2s (value = 1), 0.35s, 0.5s, 0.65s, 0.8s (value = 5).

Setting 16: Maximum current

All output levels scale to the maximum current defined here, that means output level 21 equals the maximum current. The maximum current is set in 100 mA increments, i. e. at a setting value of 10 the driver will calibrate the output to a maximum current of 1000 mA. The value can not be set higher than the highest current the driver hardware can safely provide, which is hard coded into the firmware. If the value of this setting has been changed, the driver will automatically recalibrate AFTER LEAVING the setup mode. The actual calibration procedure first calibrates the minimum output level and then ramps up the output until the desired maximum current is reached. When the procedure is finished the main LED will be turned off and the driver will return in normal mode after toggling power. Should a problem occur during calibration and the desired maximum current can't be reached (for example because of a low battery voltage) then the driver will signal this with a few blinks. In this case no changes are made to the previous calibration settings. *Note that the highest possible output currents of 1200 mA are only possible with a Li-Ion rechargeable.*

Setting 17: Run calibration

If set to “Yes“ the driver will recalibrate the output current after leaving the setup mode. *Note: Recalibration should normally not be necessary as the calibrated output is not likely to change anytime.*

Setting 18: Reset to defaults

This setting resets all other settings to their factory default values.